



- Always purchase 25% extra
 - Ask the dealer for a quick how to install wallpaper tips

than required


Wallpaper

Tools and equipment you will require

- Measurement tape
- Adhesive if required Wallpaper roller
- Lining paper
- Wall primer Sharp knife and scissors
- Sponge Pasting and smoothing brush

Seam roller



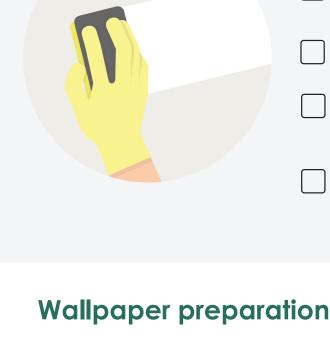

and smooth Strip of the old wallpaper, if any

Wall preparation

Use a wall primer or wallpaper liner

Ensure that the wall is clean dry

- to smoothen out the wall surface Complete the painting job of your

room before installing wallpaper

Check and mark the up side of the wallpaper

Mark the measurements on the wallpaper

Read the directions as mentioned

- Cut it using a sharp knife or scissors Always mark additional 5 to 10 centimeter extra
- while trimming Save up on the leftover wallpaper

Roll out the wallpaper on a flat surface

GENERAL INSTRUCTIONS TO PREPARE THE WALLPAPER

Roll the wallpaper and place it in a bucket full of water Latest set for 5 to 15 minutes for it to soft in and

Paste the wall wallpaper

activate the adhesive

Ready to paste wallpaper

- Mix the paste well
- Use a roller brush to apply any one pair of paste to the wall

Star placing the wallpaper as desired

- Avoid starting from the corner of the wall
- Check if the wallpaper pattern is right way up Place the wallpaper at the top with extra

Paste the wall wallpaper

- 5 centimeter overhung Avoid moving the paper around too much
- Ensure that you don't overlap the joints
- Follow the sequence if the wallpaper is numbered Check if the wallpaper pieces needs to be installed
- Smoothen the wallpaper using a smoothing brush

alternating one way up and the other inverted

- Move in vertical creases to get rid of air bubbles For a professional finish, gently press into the
- corners of the wall
 - Use a damp sponge to get rid of any excess paste Let the wallpaper dry completely for 24-48 hours